



Installation Guide

EXTERIOR SHIPLAP SIDING

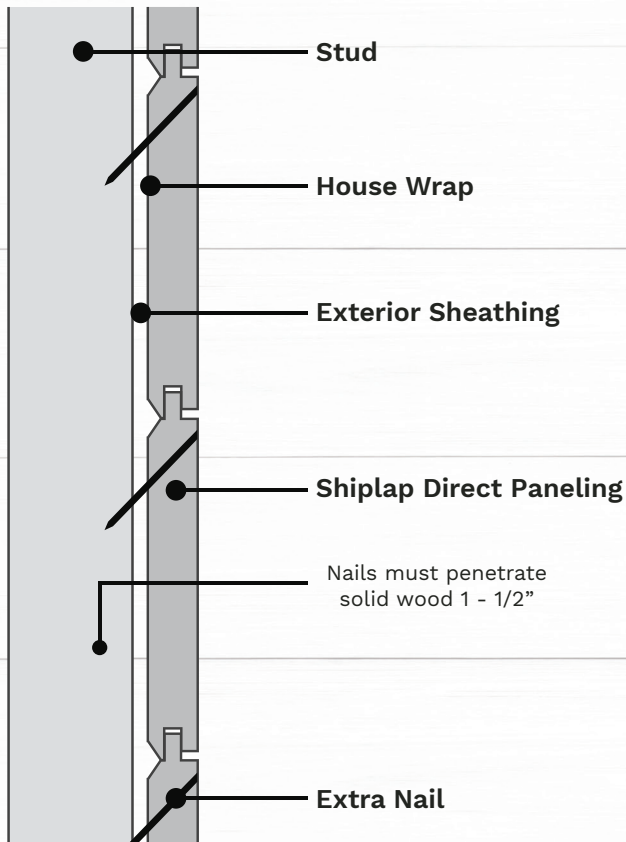

6" and Narrower Siding

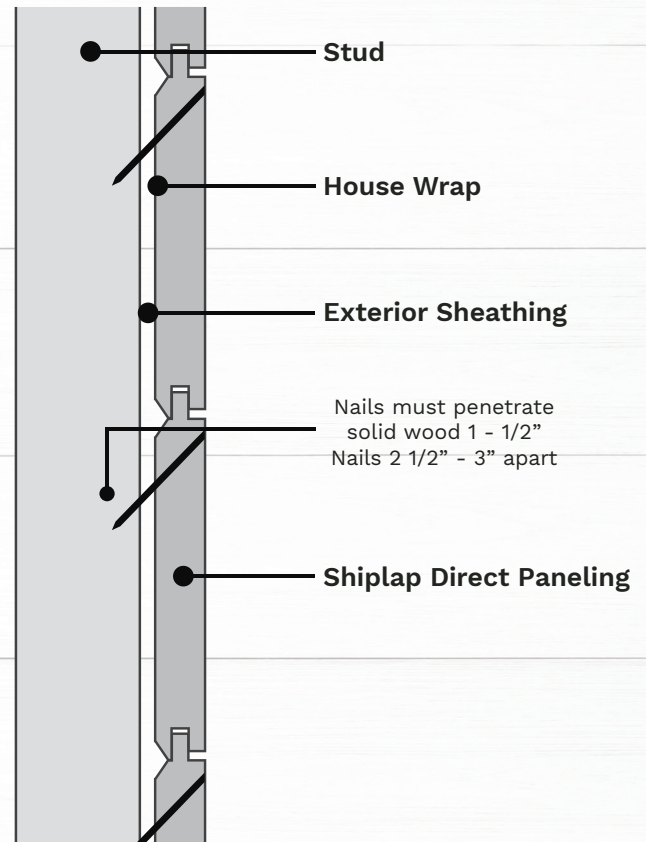

8" and Wider Siding

Exterior shiplap siding can be installed horizontally or vertically. In horizontal application, start at the bottom and work up with the groove edges facing downwards. Siding must be fastened with two fasteners per framing member (16" - 24" On Center), simply fastening through the tongue is not sufficient. Nails must penetrate 1-1/2 inches into solid wood. Use of 8d x 2 1/2" Stainless Steel Ring Shank Nails are recommended.

In vertical application, start at one corner with grooved edge toward the adjacent wall. Use a level or plumb line to ensure that the first board is installed plumb. The grooved edge of the first board may have to be trimmed to ensure a flush fit. Siding is nailed to horizontal blocking lines installed between studs or to furring strips. As with horizontal installation, pieces must be fastened with at least two fasteners per framing member (16" - 24" On Center).